



1 4x



2 4x



3 1x



4

4

5

5



6

6

6

6





7



7



8

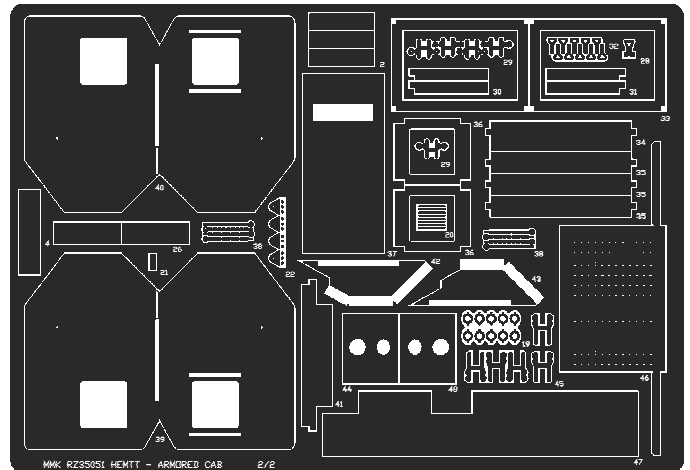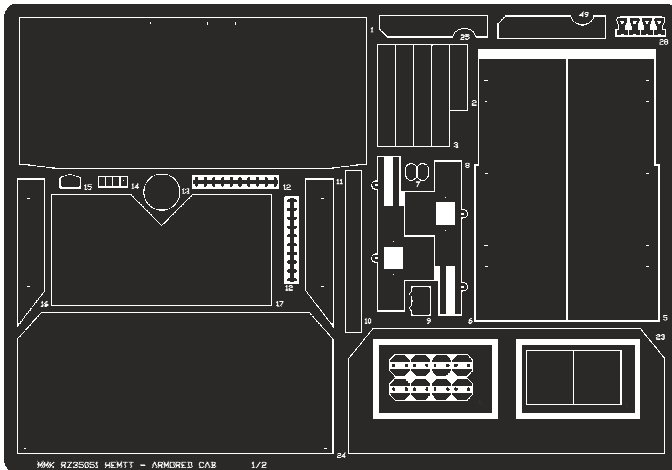

X - RESIN PARTS

(X) - PHOTO-ETCHED PARTS

recommended kits: AFV, Italeri, Trumpeter



recommended accessories: Eduard 36259 HEMTT exterior  
 Eduard 36269 HEMTT interior





**Step 1 - Remove all protruding details on the outside cab.**





**Krok1 - Odstraňte všechny vystupující detail na vnější straně kabiny.**

**A** Doors 1xL , 1xR

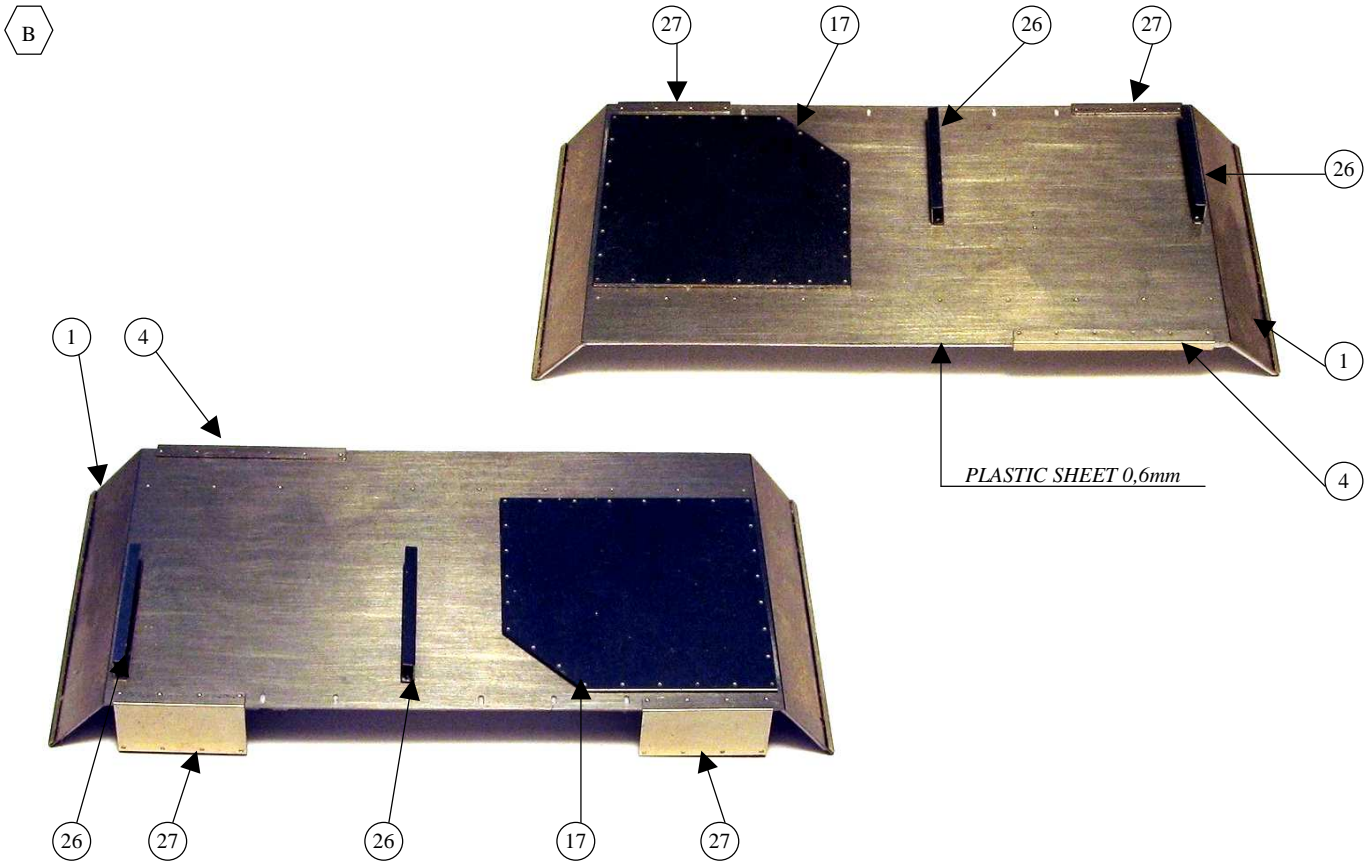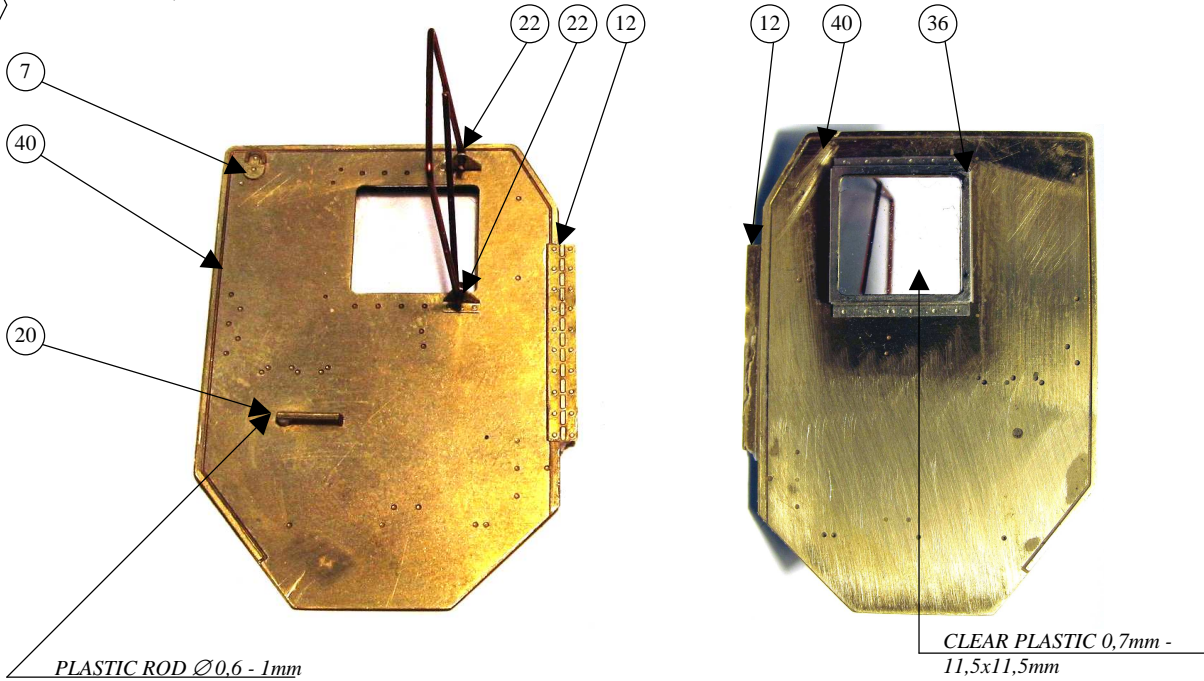






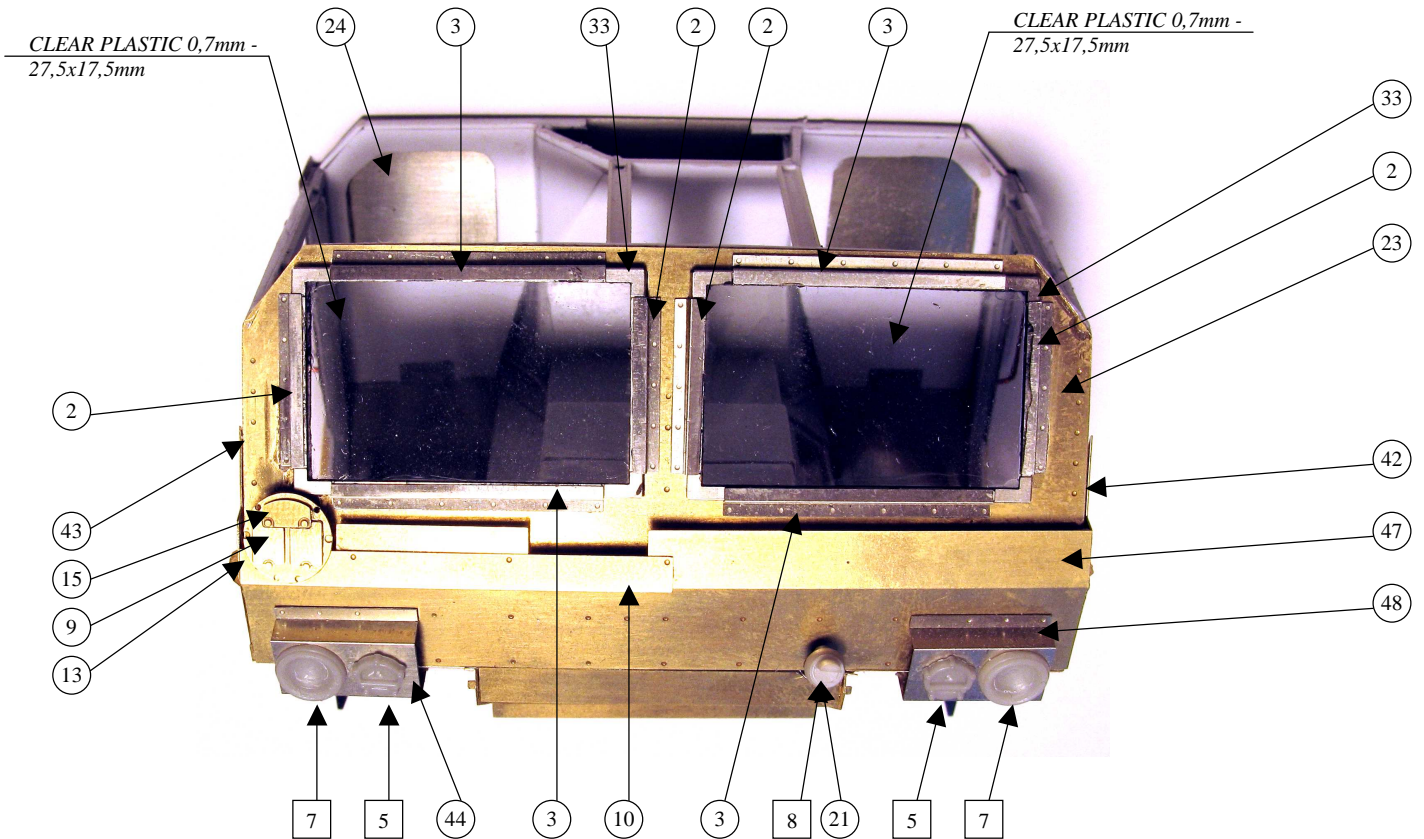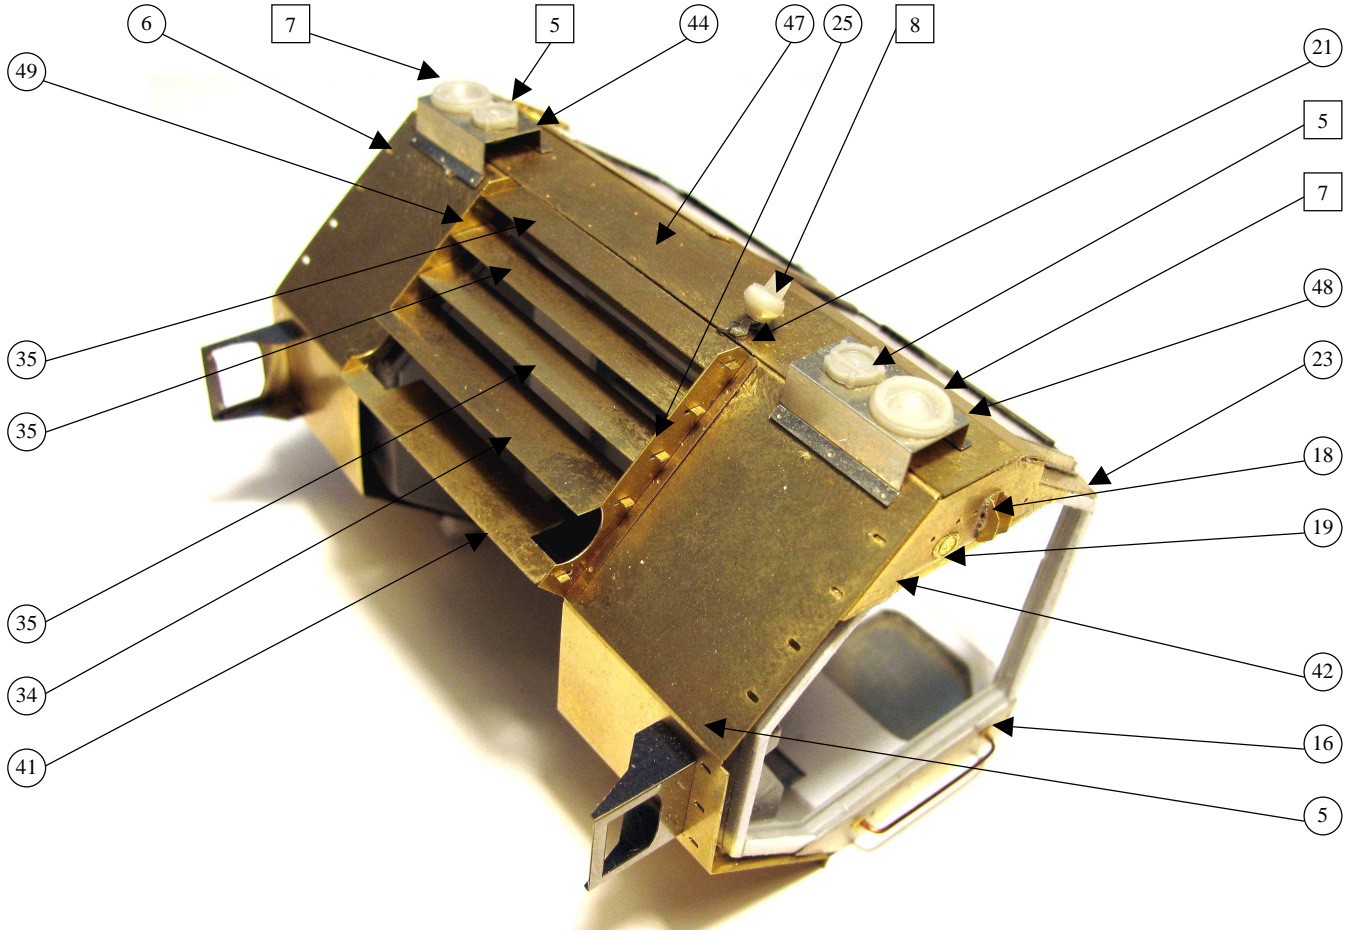

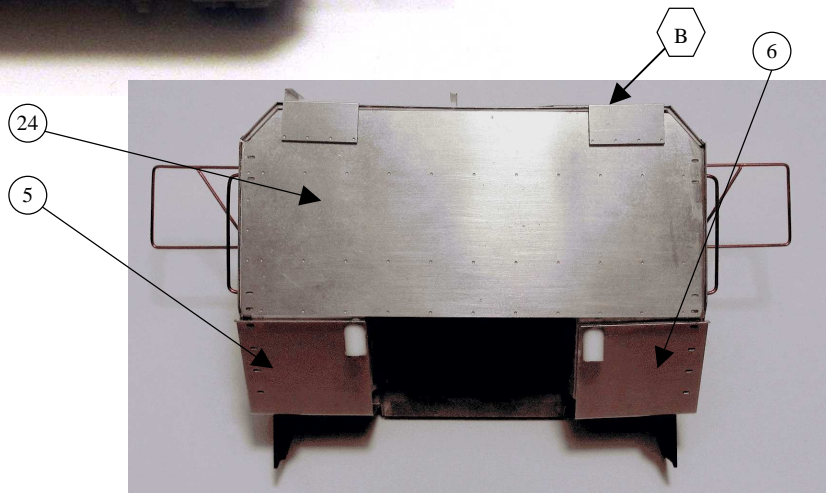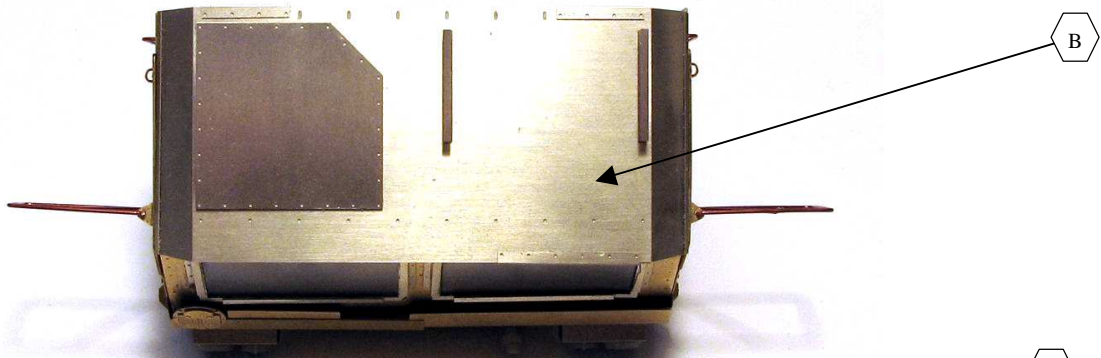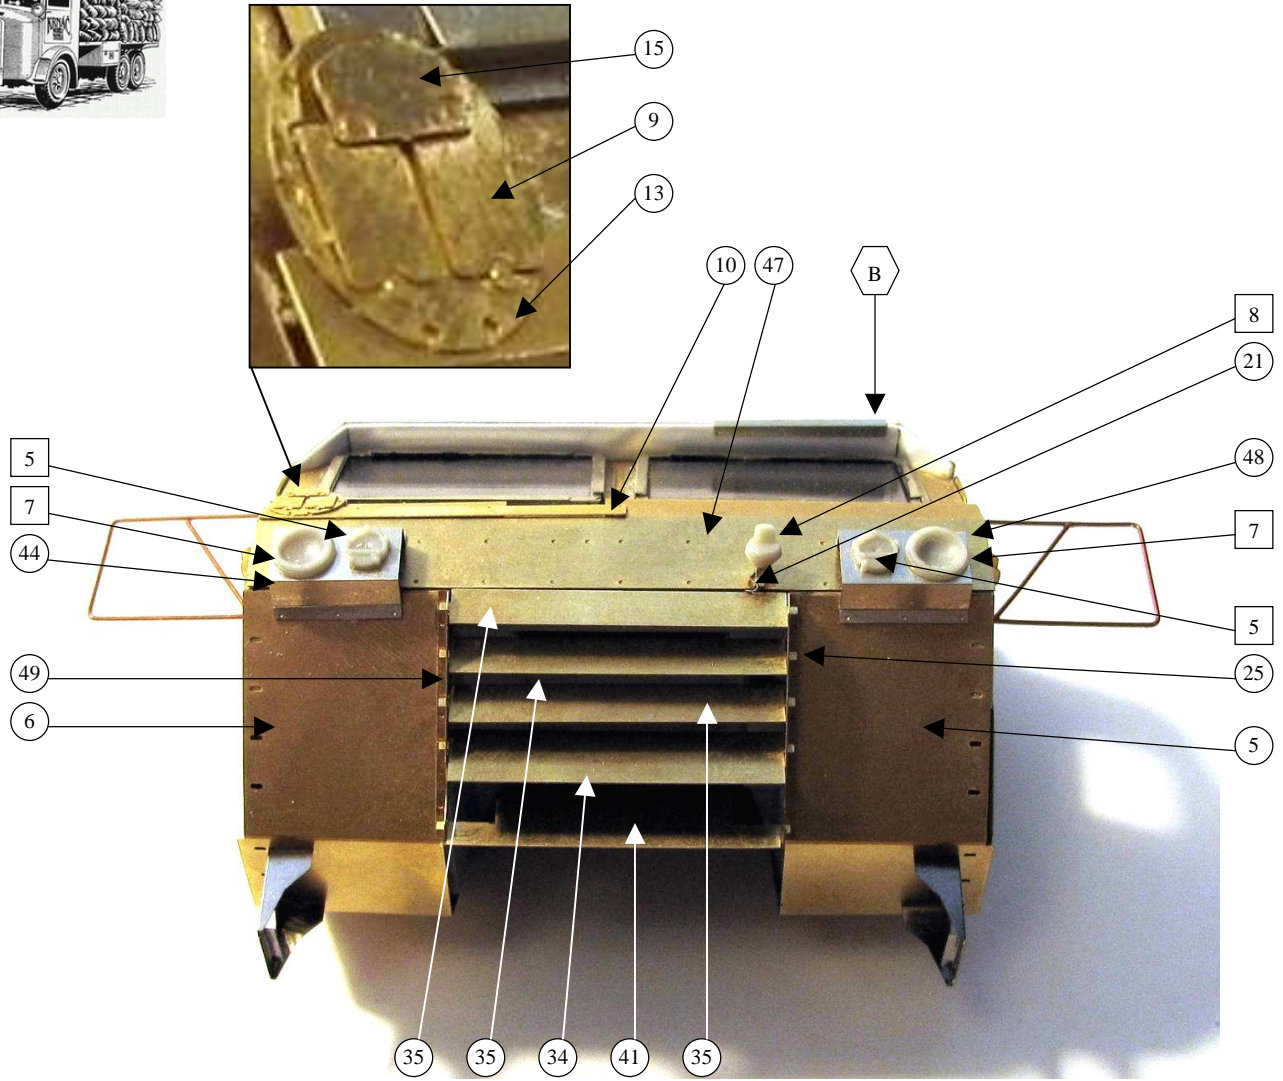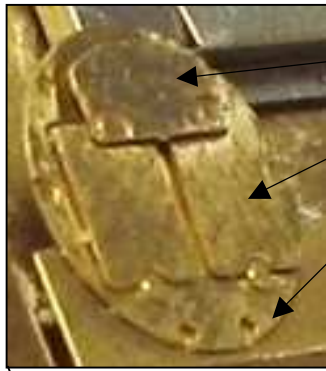




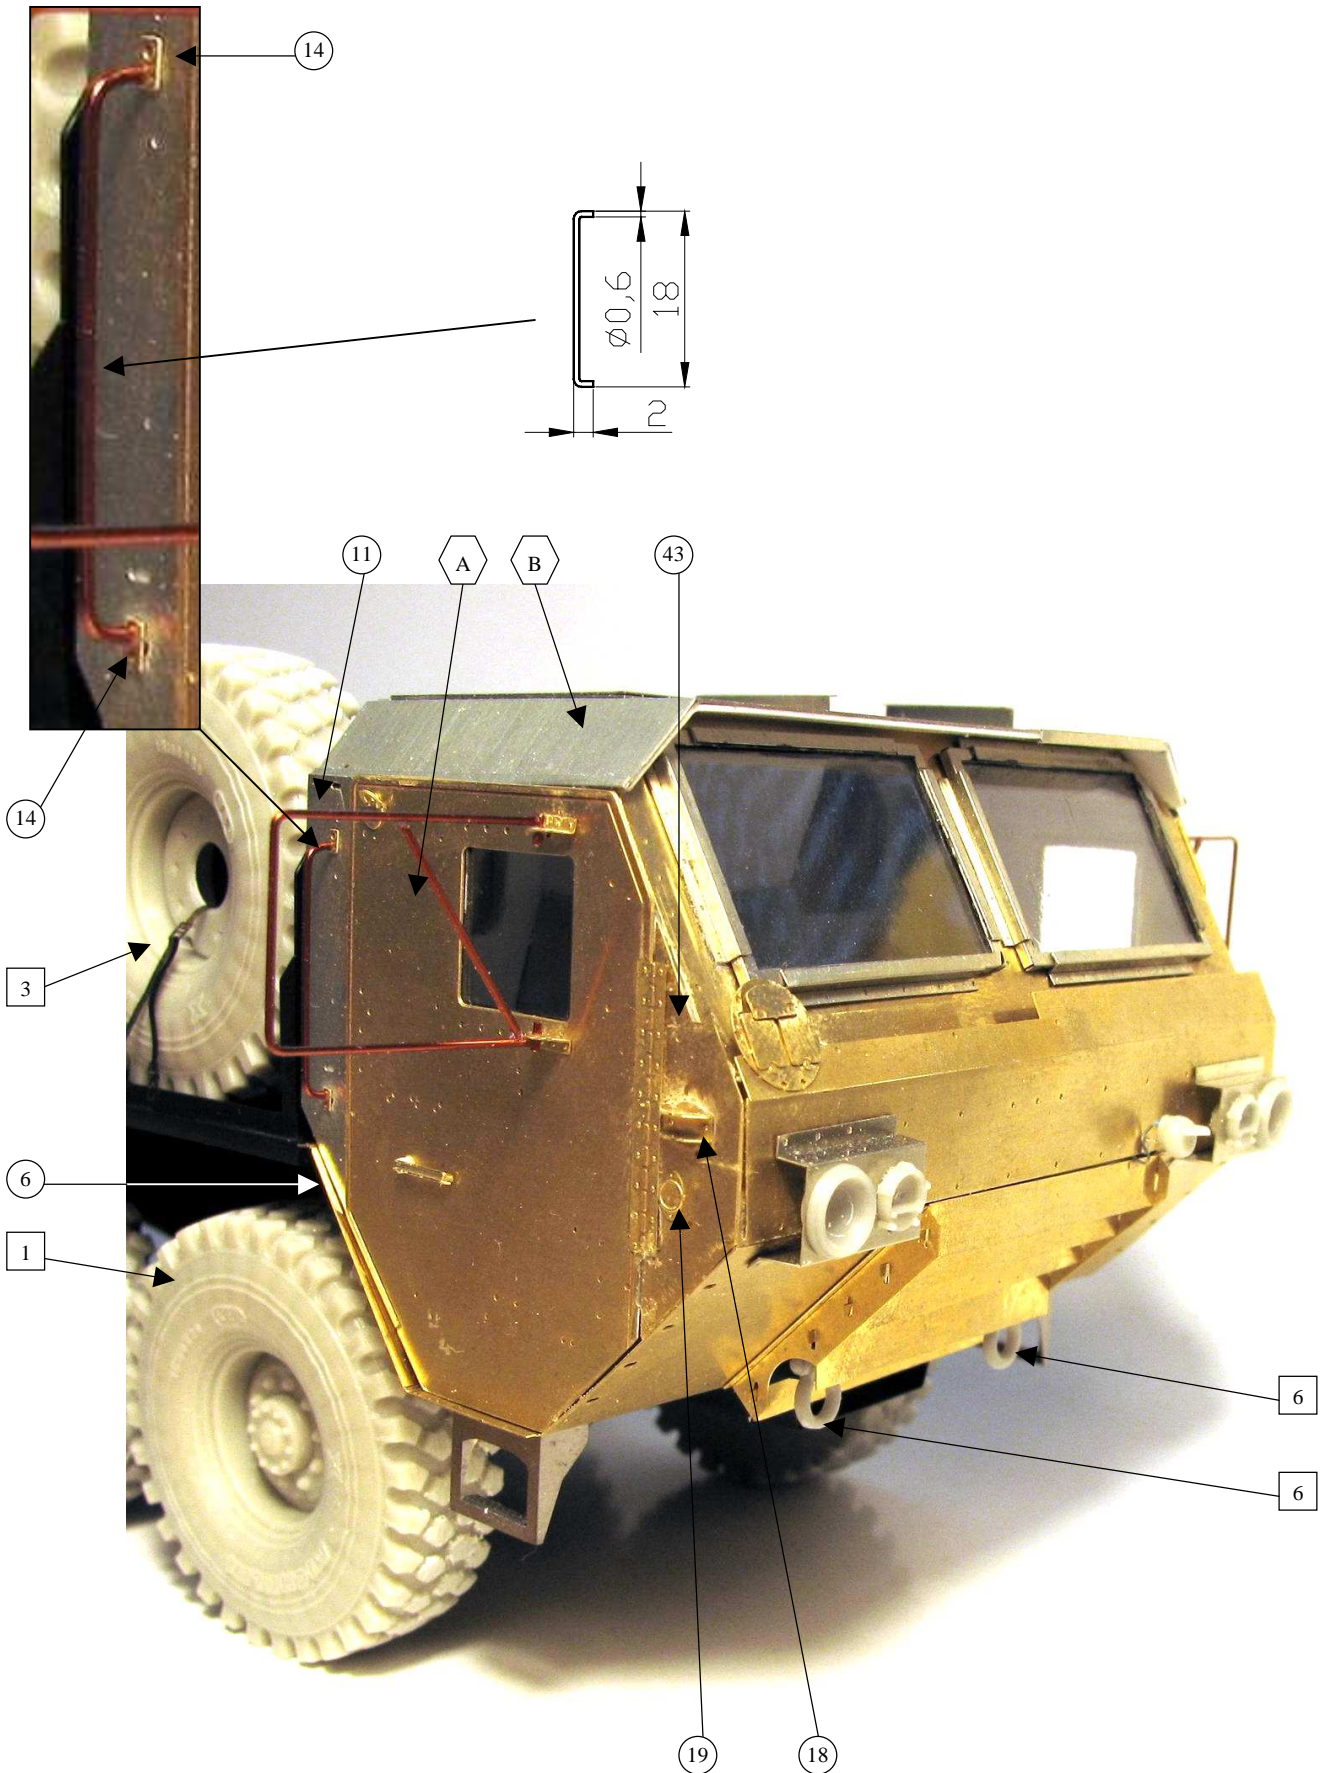

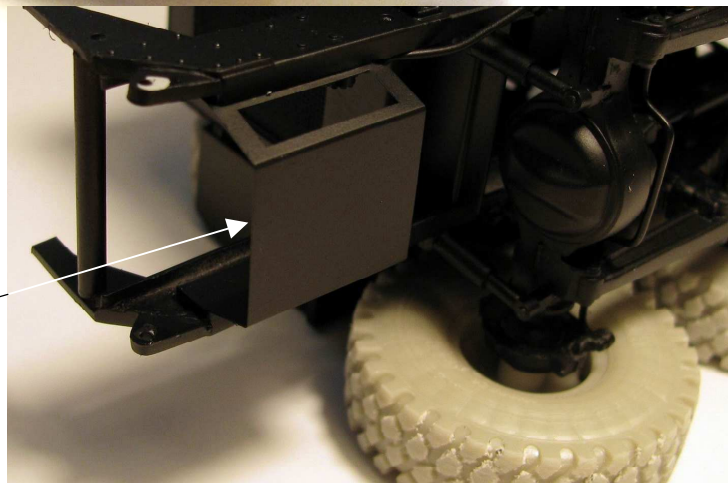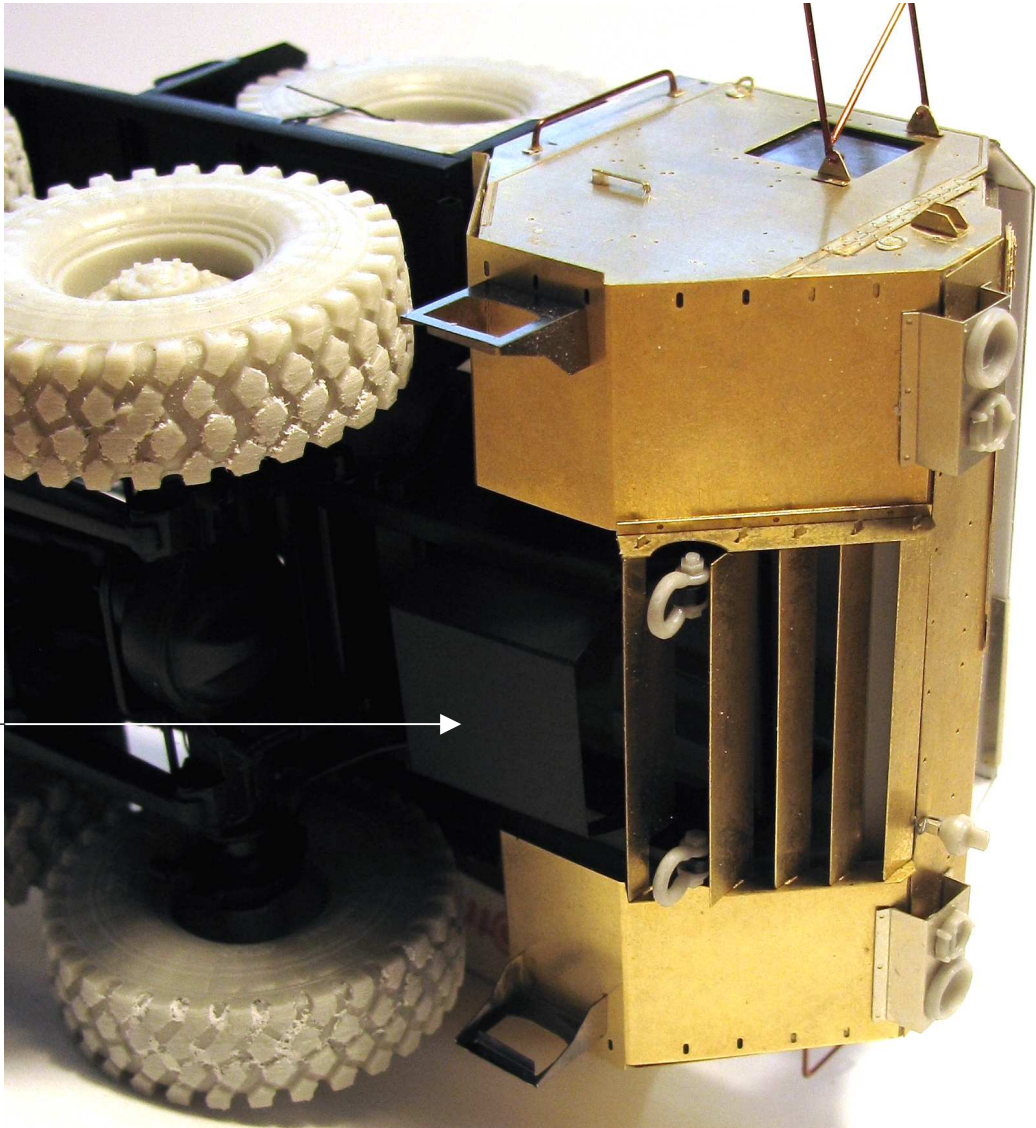



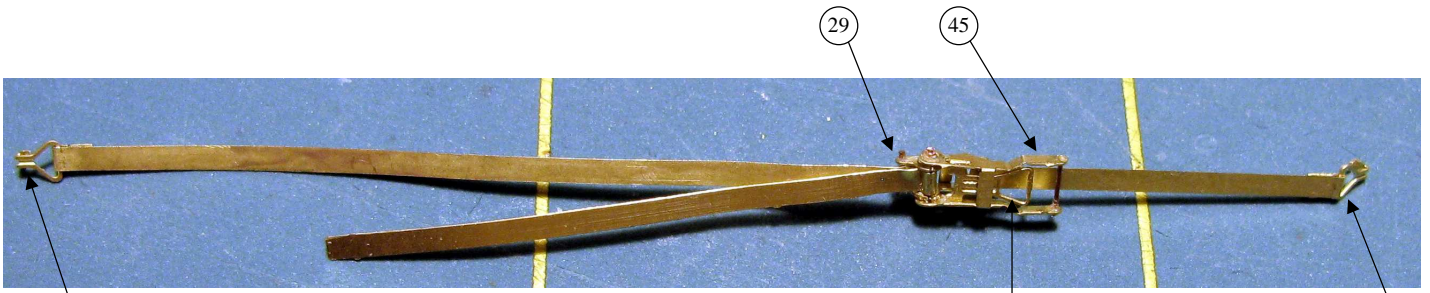


32

29

45

32

WIRE Ø,2-2,0mm      29      WIRE Ø,3-2,5mm      28      28      45      WIRE Ø,2-3,0mm

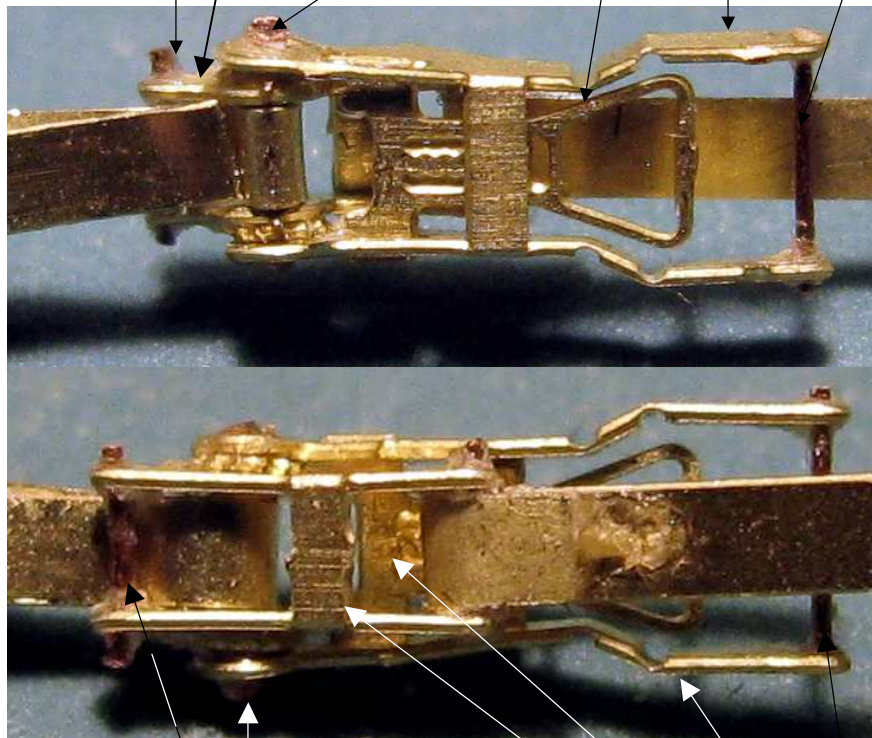

WIRE Ø,2-2,0mm      WIRE Ø,3-2,5mm      29      28      45      WIRE Ø,2-3,0mm





